

## Airbag installation



Place top-down, not exceeding load

Do not place airbag on the floor



Place airbag at least 5cm from floor



Minimum of 50% of load surface should be covered with airbags



Do not fold airbags when in use



Do not level freight with airbags



Do not use airbags between load and door



If void is too wide, add buffer material



Do not step on airbags

## Airbag installation



Do not use airbags horizontally



Use buffer material to avoid sharp edges



Do not put already inflated airbag between load



Do not use 2 airbags or more to fill a void



Working pressure is mentioned on label



or on the airbag

If you want to re-use the airbag, please check it carefully.

## Airbag installation



Do not point tools at face or body



Protection of eyes and ears is strongly advised



90cm bag for 35cm void max.



120cm bag for 45cm void max.



150cm bag for 55cm void max.



Use Square Bags for voids larger than 55cm